

OUTDOORS

GARDEN FURNITURE CLEANER



HG garden furniture cleaner

- extremely powerful
- for all types of garden furniture

HG garden furniture cleaner effortlessly removes stubborn stains from plastic, aluminium, woven cane (look), pulp cane, polywood and metal garden furniture, as well as from epoxy, galvanised and most other (combinations of) materials.

Directions for use: Turn the nozzle on the front side a quarter. Spray the surface area to be cleaned and leave to soak for one to two minutes. Remove dirt with a cloth or kitchen roll. For very stubborn stains, leave to soak a little longer. Remove dirt with a brush or a pad and rinse. Turn the nozzle a quarter after use (OFF).

Attention: Transport and store the bottle upright. For weathered plastic furniture we recommend HG plastic garden furniture restorer. For maintenance of your (hard) wood garden furniture, please refer to our extensive product range for hardwood products.

Medical personnel can request the data-sheet via +31 36 54 94 777
The consumer's information sheet can be obtained via www HG eu



0512401105006 2506

Products and tips? See:

HGEU

Consumer Services?
Call: +44 (0)1279 598360

P101- If medical advice is needed, have product container or label at hand. P102- Keep out of reach of children. contains a.o.: < 5% non-ionic and anionic surfactants, phosphates; preservation agents: 2-bromo-2-nitropropane-1,3-diol

Made in The Netherlands by HG International b.v., P.J. Oudweg 41, 1314 CJ Almere, The Netherlands, Tel.: +31 36 54 94 700

HG Does what it promises.

UK importer: HG UKI Ltd, Weston Business Centre, Parsonage Road, Takeley, Essex, CM22 6PU Tel.: +44 (0) 1206 822 744